breezesta™

# SKYLINE SIDE DINING CHAIR

**SK-0407**

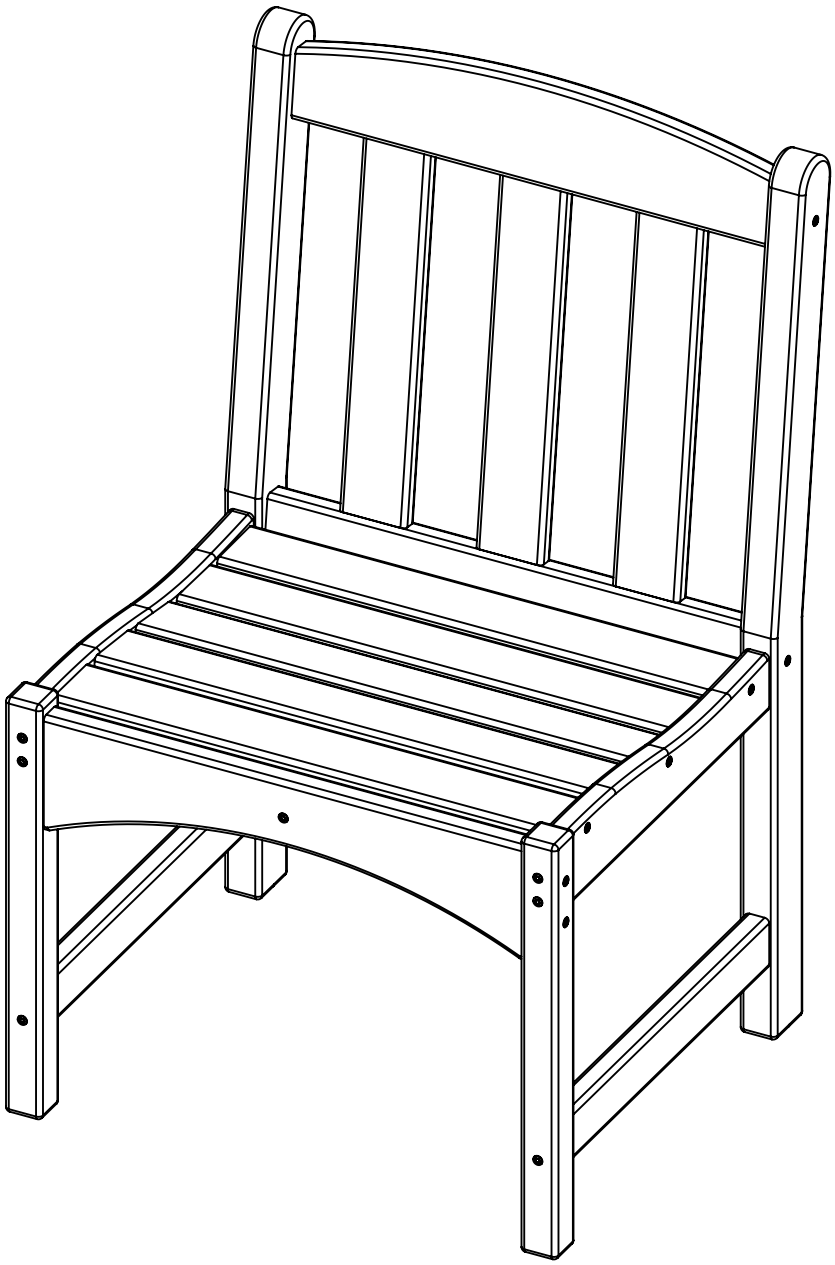

REV00-1/19

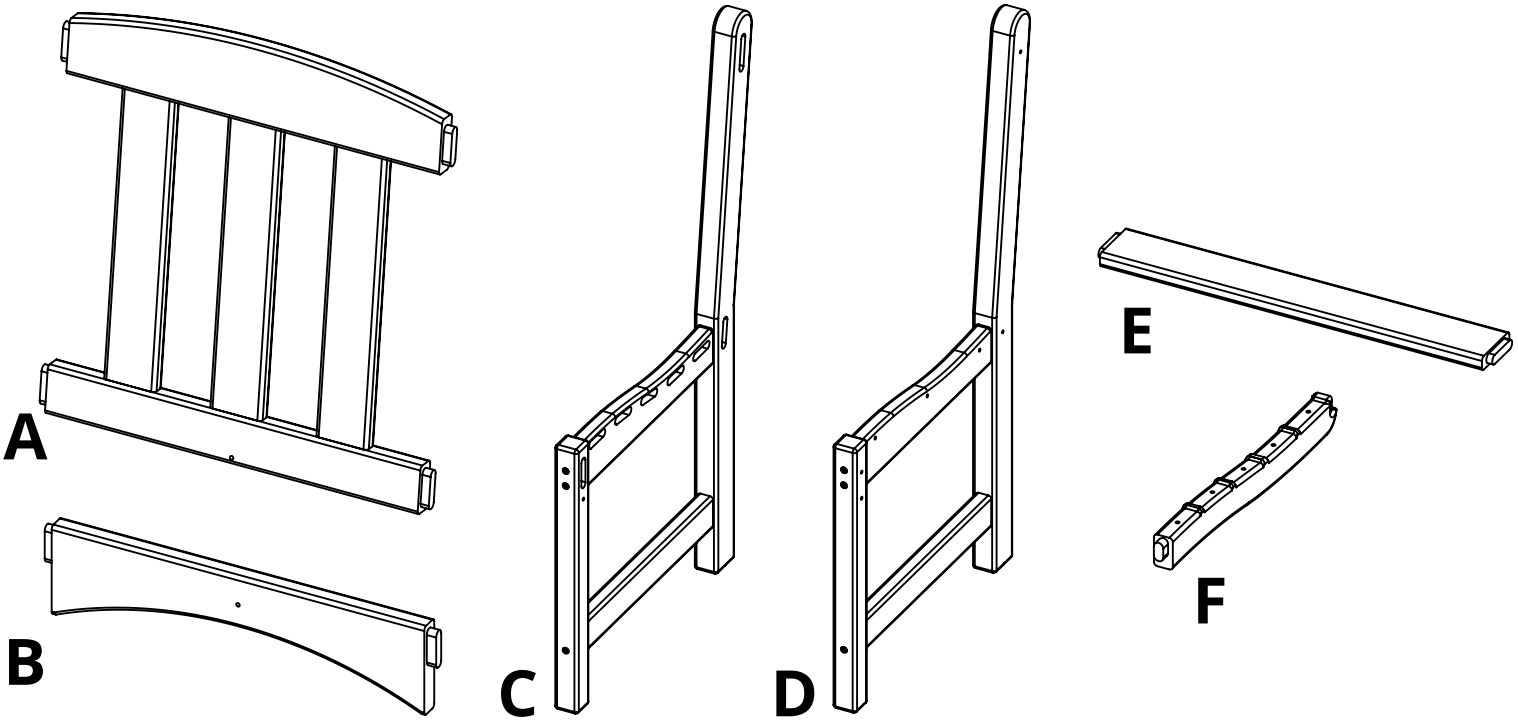


| PARTS | | | |
|---|---|---|---|
| **PART** | **DESCRIPTION** | **PART NO.** | **QTY** |
| A | BACK ASSEMBLY | SA-00157 | 1 |
| B | FRONT RAIL | PRT-00293 | 1 |
| C | LEFT SIDE ASSEMBLY | SA-00155 | 1 |
| D | RIGHT SIDE ASSEMBLY | SA-00156 | 1 |
| E | STANDARD SEAT SLAT 21.25 | SS-20.25 | 5 |
| F | SEAT SUPPORT | PRT-00294 | 1 |

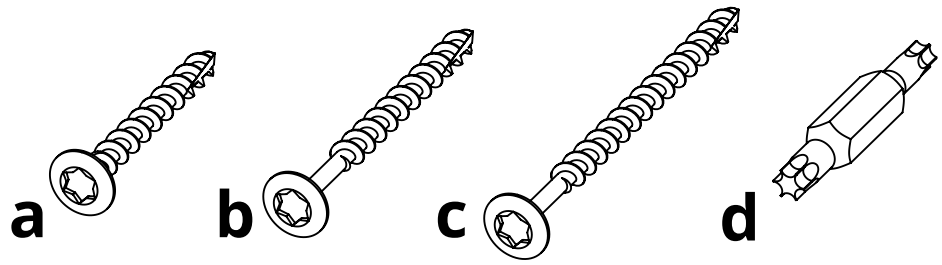


| HARDWARE | | | |
|---|---|---|---|
| **PART** | **DESCRIPTION** | **PART NO.** | **QTY** |
| a | #8 X 1-1/2" TORX SCREW | H-0000-S815 | 7 |
| b | #8 X 2" TORX SCREW | H-0000-S82 | 5 |
| c | #8 X 2-1/2" TORX SCREW | H-0000-S825 | 9 |
| d | T20 & T25 TORX BIT | H-0000-CTD | 1 |

**Suggested Tools:** Drill, Plastic Mallet

# *Please read entire instructions before beginning*

**1.** Attach Parts A, E, & B to Part C using Hardware a on Parts E and Hardware c everywhere else

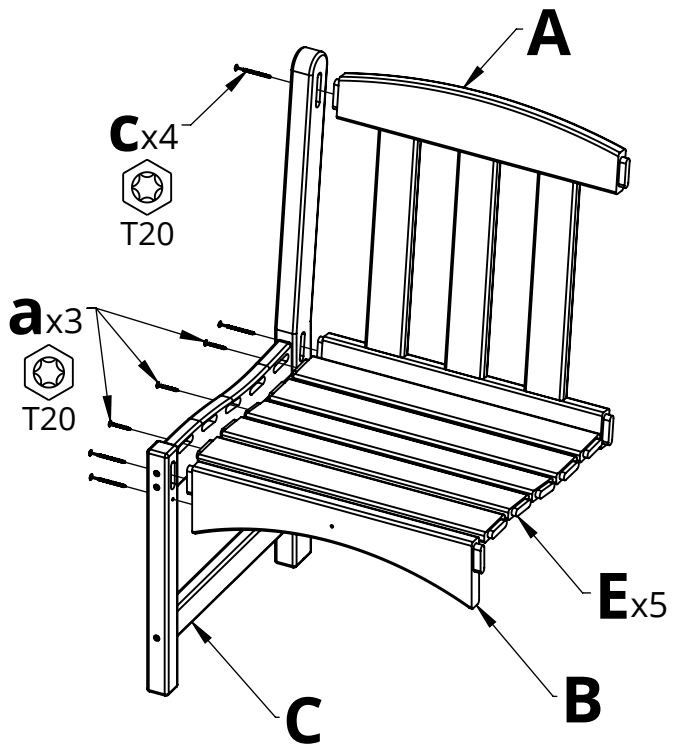


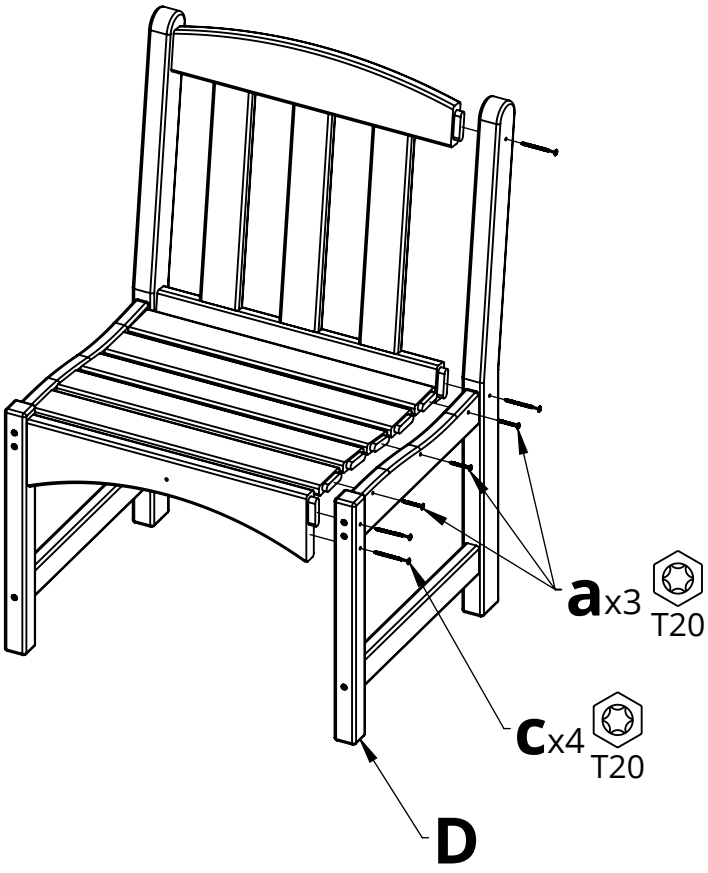


**2.** Attack Part D using the same hardware as Step 1
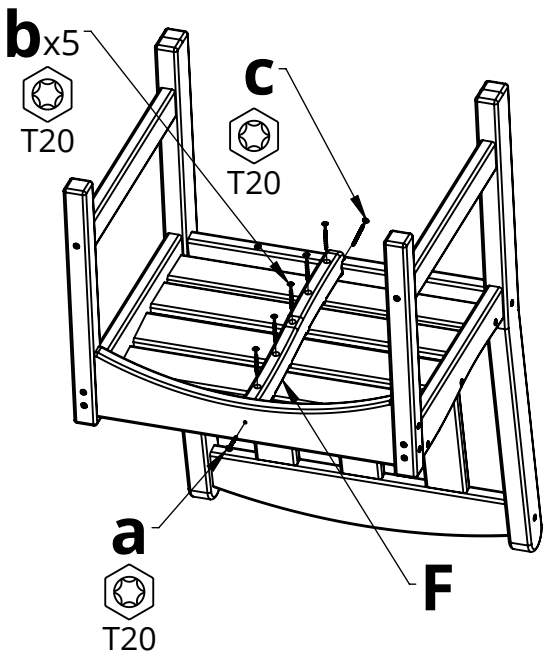
**3.** Attack Part F using the hardware shown