


Piedmont Love Seat


PT-0501

BREEZESTA tm
Recycled Poly Furniture

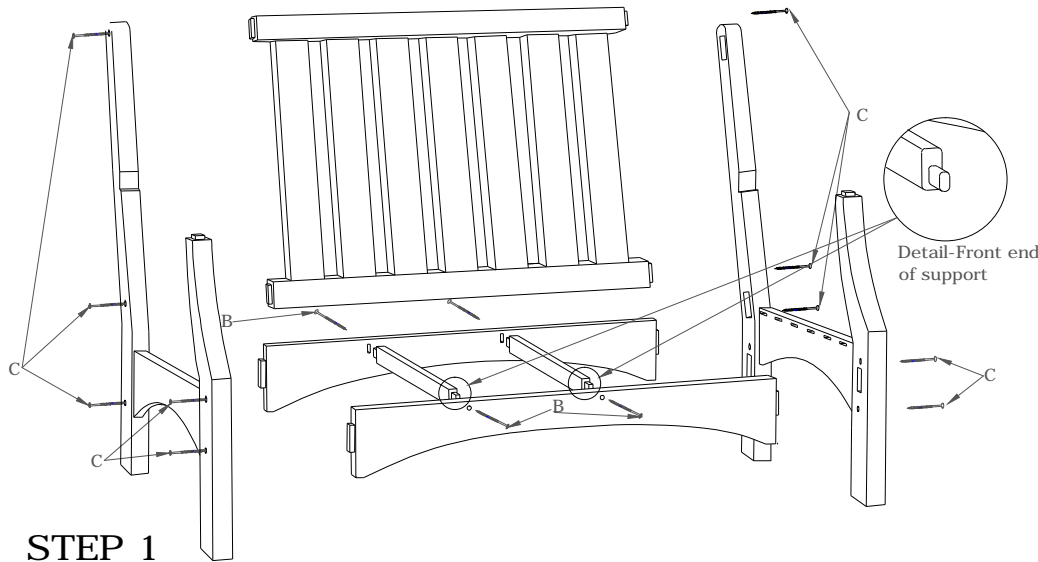


STEP 1

Place front and back spreaders between, Right Side Assembly and Left Side Assembly as shown. Attached with screws "C". Insert support braces as shown and attach with screws "B". Place the back assembly so that the tenons on the assembly fit into the pockets on the Side Assemblies as shown. Attach with screw "C".

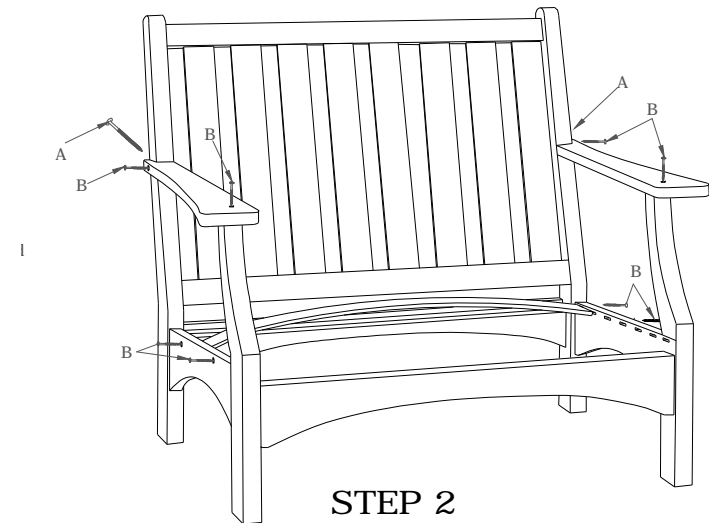


STEP 2


Insert the tenons of the of the slats into the pockets of the side assemblies by bowing them slightly. When all of the slats are in place screw through the side assemblies as shown with screws "B". Place the armrests over the tenons in the front of the side assemblies. Attach through the top and sides with screws "A". From the back screw through the back assembly into the arms with screws "A".

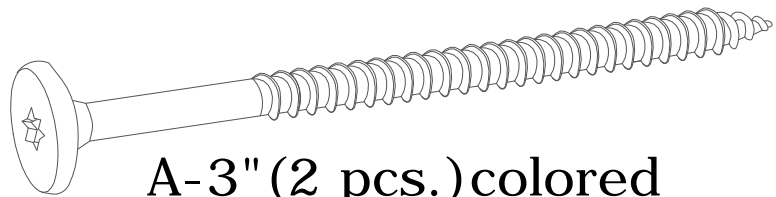

A-3" (2 pcs.) colored




B-1.5" (26 pcs.) colored

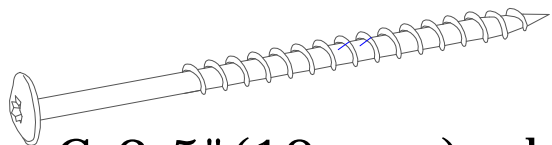

C-2.5" (10 pcs.) colored

LIST OF PARTS

- Side Assembly (1 right, 1 left)
- Support Braces (2)
- Arm Rest (1 right, 1 left)
- Front / Back Spreaders (2)
- Back Assembly (1)
- Seat Slats (6)
- Colored Screws "A" (2)
- Colored Screws "B" (26)
- Colored Screws "C" (10)
- Insert Bit Tool (1)

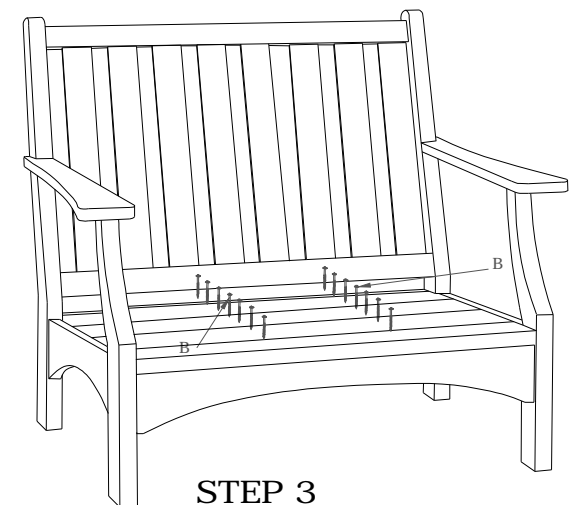

STEP 3

Using Screws "B" attach the slats to the under supports.