



breezesta™

# SKYLINE ROCKING BENCH

SK-0404-36, SK-0404-48, SK-0404-60

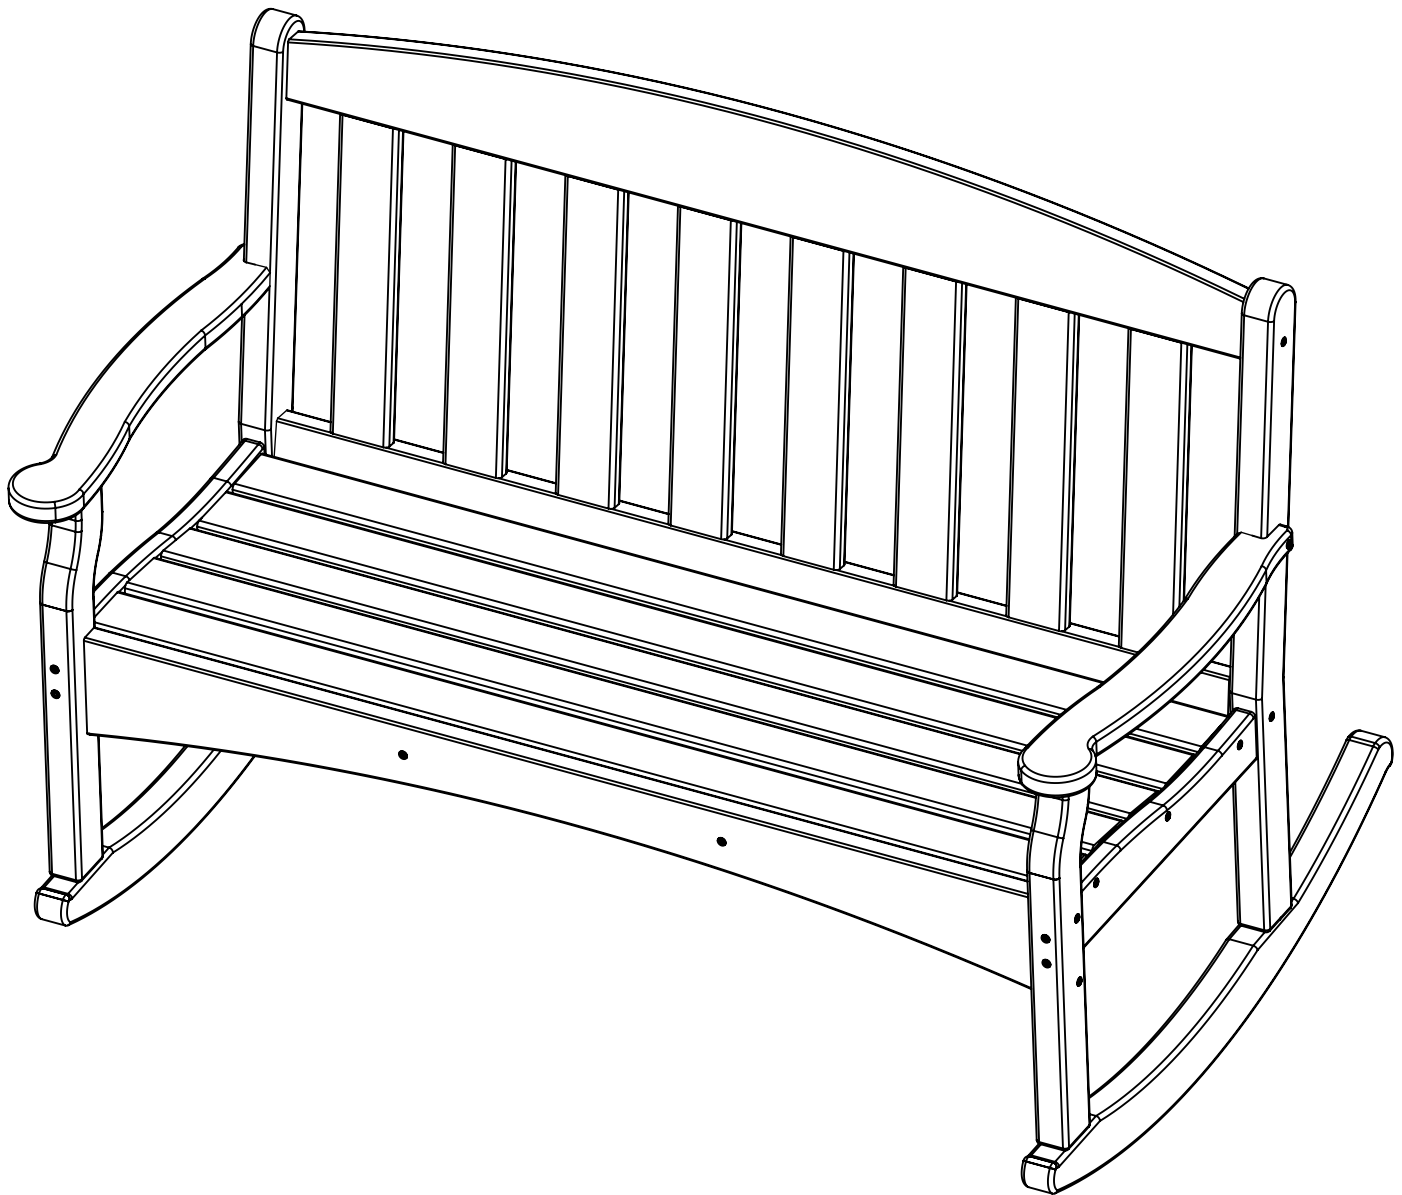


REV00-1/19

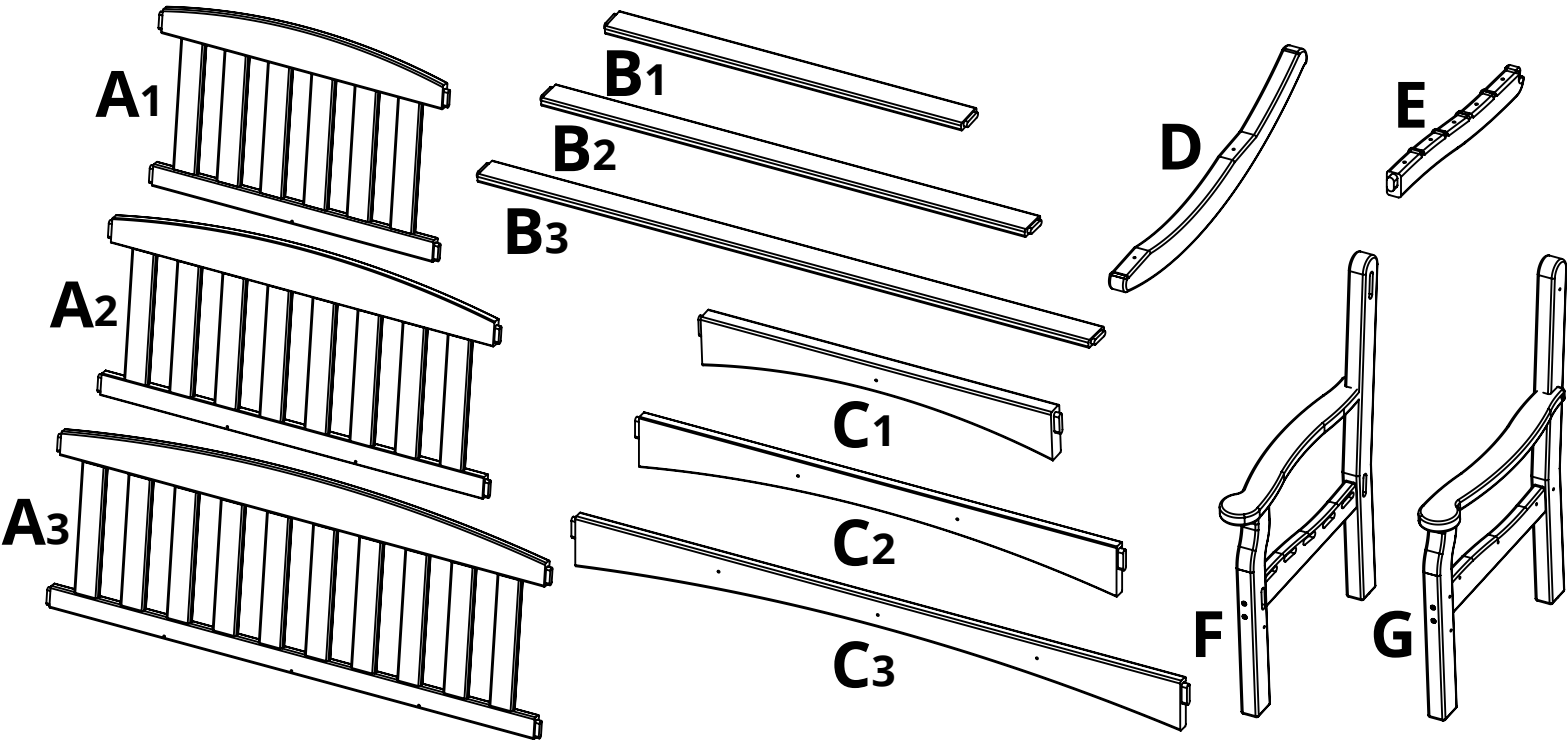

## PARTS

PART	DESCRIPTION	PART NO.	QTY 36"	QTY 48"	QTY 60"
A1	BACK ASSEMBLY	SA-00170	1	-	-
A2	BACK ASSEMBLY	SA-00171	-	1	-
A3	BACK ASSEMBLY	SA-00173	-	-	1
B1	36IN SEAT SLAT	SS-33.562	5	-	-
B2	48IN SEAT SLAT	SS-45.562	-	5	-
B3	60IN SEAT SLAT	SS-57.562	-	-	5
C1	FRONT RAIL 36"	PRT-00318	1	-	-
C2	FRONT RAIL 48"	SA-00197	-	1	-
C3	FRONT RAIL 60"	SA-00198	-	-	1
D	ROCKER	PRT-00161	2	2	2
E	SEAT SUPPORT	PRT-00294	1	2	3
F	LEFT SIDE ASSEMBLY	SA-00184	1	1	1
G	RIGHT SIDE ASSEMBLY	SA-00185	1	1	1

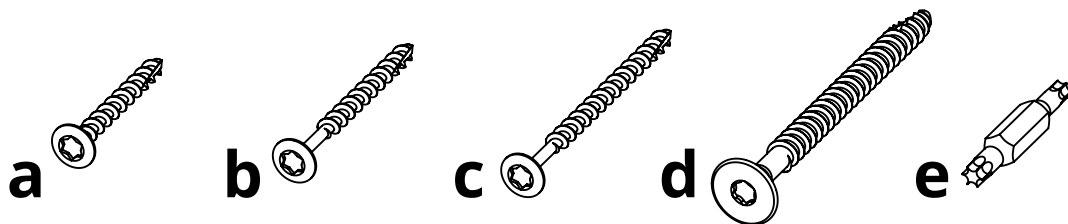


## HARDWARE


PART	DESCRIPTION	PART NO.	QTY 36"	QTY 48"	QTY 60"
a	#8 X 1-1/2" TORX SCREW	H-0000-S815	7	8	9
b	#8 X 2" TORX SCREW	H-0000-S82	5	10	15
c	#8 X 2-1/2" TORX SCREW	H-0000-S825	9	10	11
d	1/4-10 x 3" LAG	H-0000-S103	4	4	4
e	T20 & T25 TORX BIT	H-0000-CTD	1	1	1

**Suggested Tools:** Drill, Plastic Mallet



# Please read entire instructions before beginning

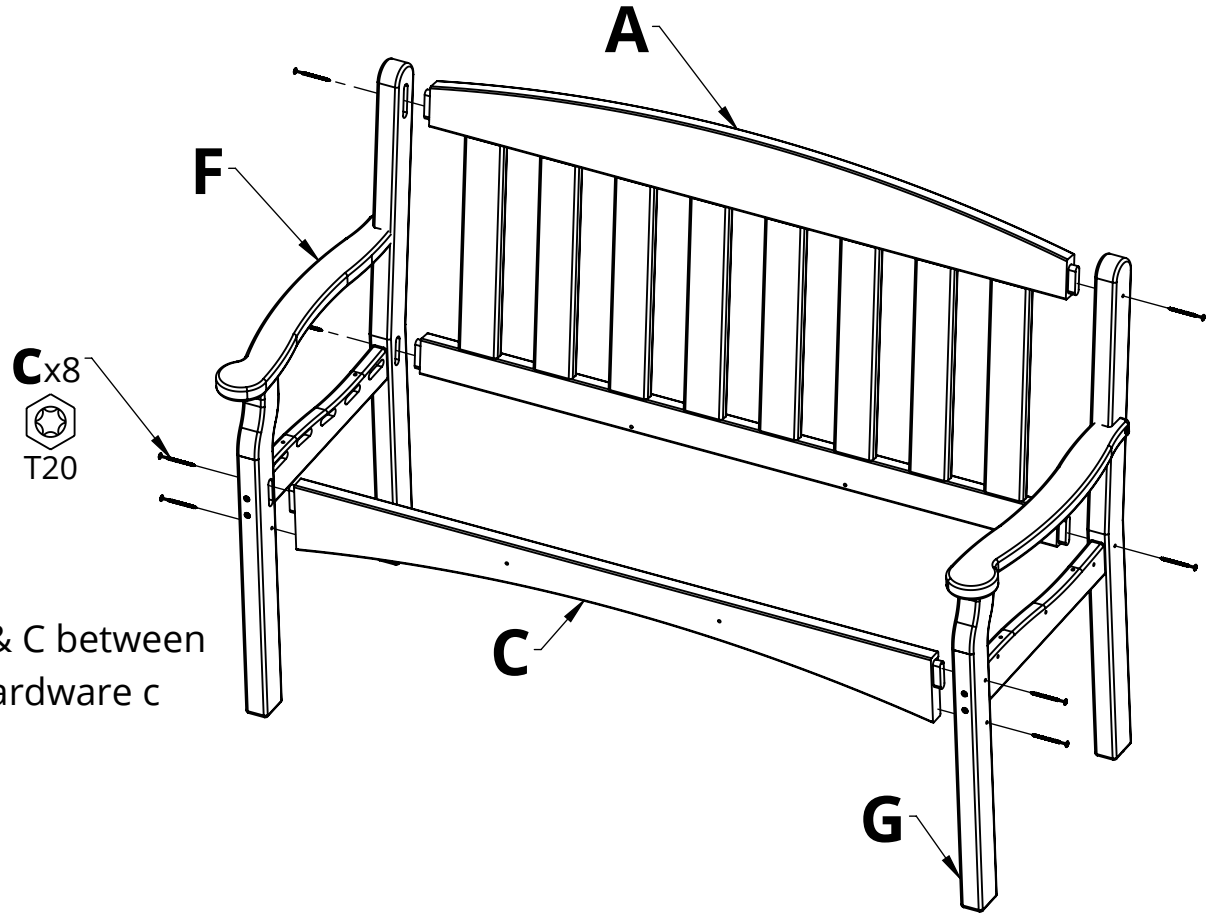


**1.** Attach Parts A & C between Parts E & F using Hardware c

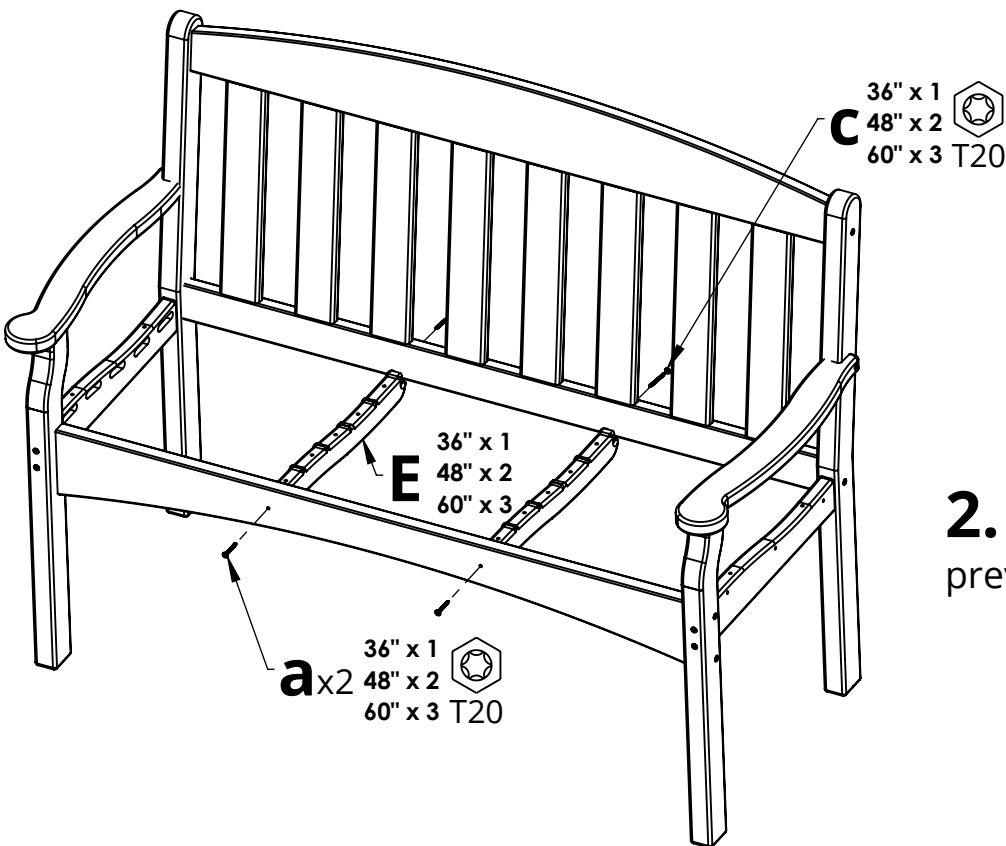

**2.** Connect Part(s) E to the previous assembly as shown

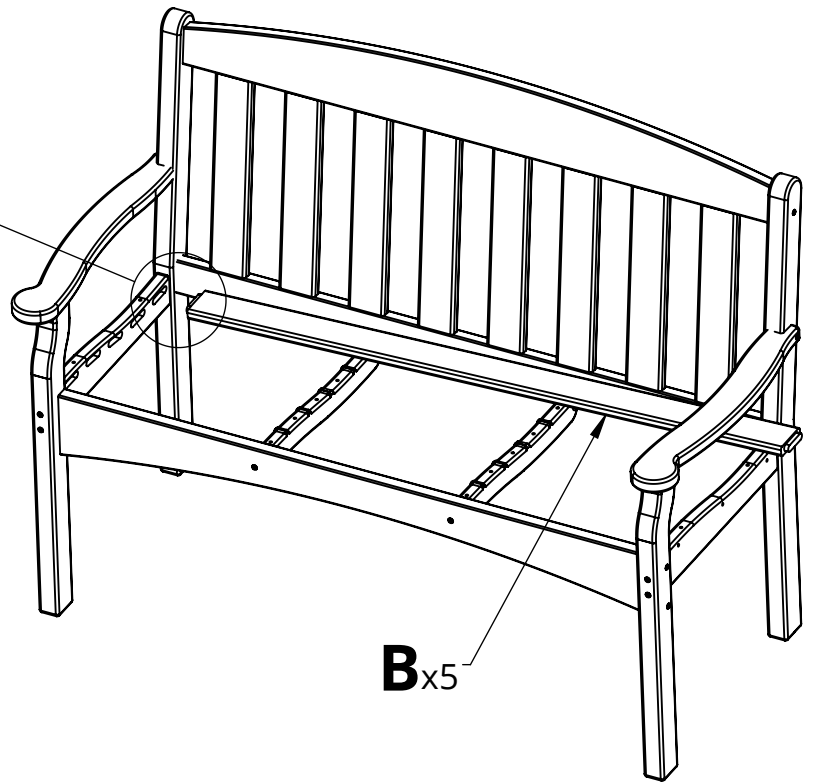
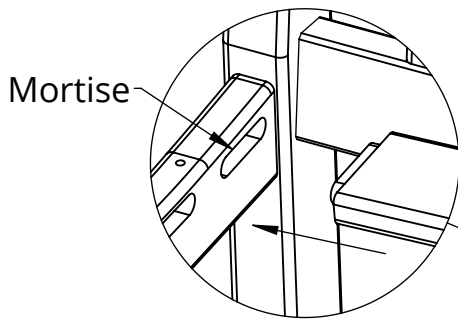


**3.** Slide one end of Parts B into the mortise as shown & flex it into the mortise on the other end

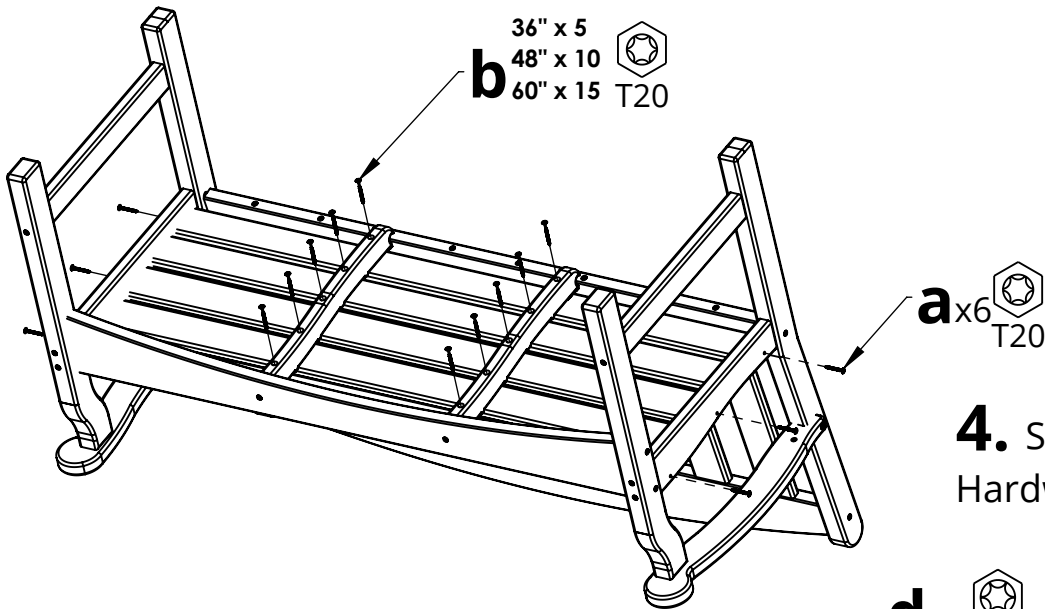

**4.** Secure the assembly using Hardware a & b as shown

**5.** Attach Parts D as shown

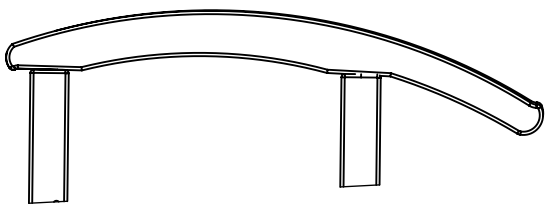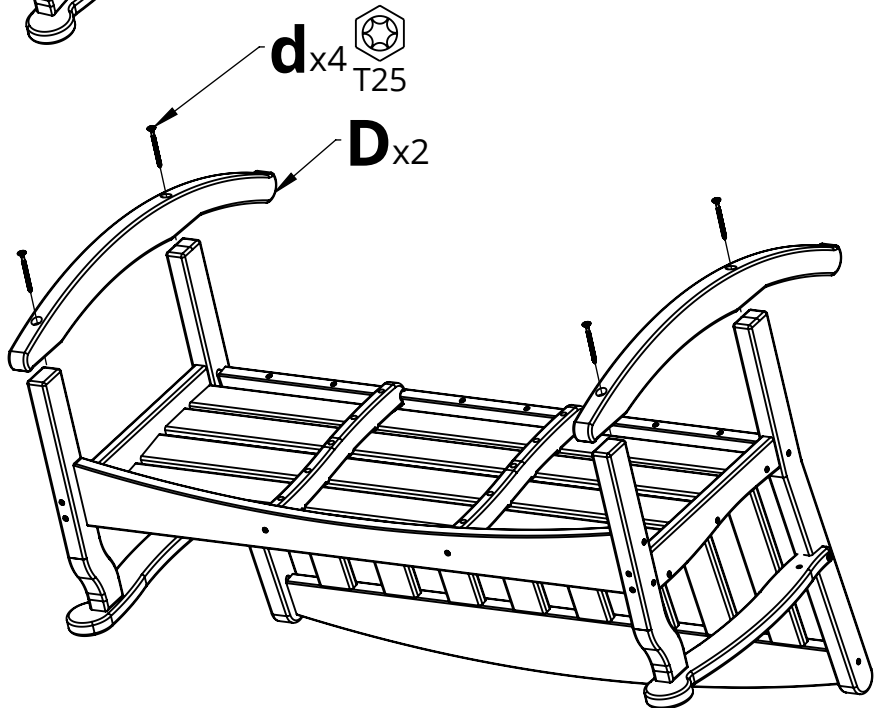

**Part D Placement**